Pixel Print Plus! The TS2068 Desktop Publisher.

<<<MENU SELECTIONS>>>

(K) KEEP-save/keep a doodle pad.
(S) SAVE-PIXEL PRINT column.
(L) LOAD-PIXEL PRINT column.
(I) ICON-LOAD into a doodle pad.
(G) GRAPHICS-LOAD/SAVE SCREEN$.
(U) UNDO-replace present doodle pad with last 'KEEP'.
(W) WIDE-select character width.
(H) HIGH-select character height.
(C) CLS-Clear display/doodle pad.
(M) MOVE-Scroll UP 'T' or DOWN 'B' in three speeds. Speeds 2 & 3 use CS or SS with 'T' or 'B' key.
(P) PRINT-to 2040 or full size printer.

(F) FONT-Activates FONT MENU. Select T-TIMEX, B-BOLD, M-MODERN, I-ITALICS, S-SPACE, K-KERN, R-RESTORE, or L-LOAD FONTS.
(B)-BLOCK FUNTION MENU. C-COPY or E-ERASE a segment of a column. I-INSERT or D-DELETE pixel row at the top of the cursor.
(X)-shifts to the RIGHT or LEFT column.
(Q)-QUIT or terminates the program.

<<<< EDITOR FUNCTIONS >>>>

(CURSOR CONTROL) "CAPS SHIFT"+5, 6, 7, or 8 keys to move CURSOR character position LEFT, DOWN, UP, & RIGHT respectively.
(CURSOR SHIFT) "SYMBOL SHIFT"+Q(<=), F(**TO**), G(**THEN**), E(>=) to SHIFT the CURSOR 1 pixel LEFT, DOWN, UP, and RIGHT respectively.
(DELETE) "CAPS SHIFT"+0 step the the CURSOR backward, erasing the LAST character.
(UNDERLINE) "SYMBOL SHIFT"+0 toggles the UNDERSCORE ON/OFF.
(INVERSE) "CAPS SHIFT"+4 toggles inverse video ON/OFF.
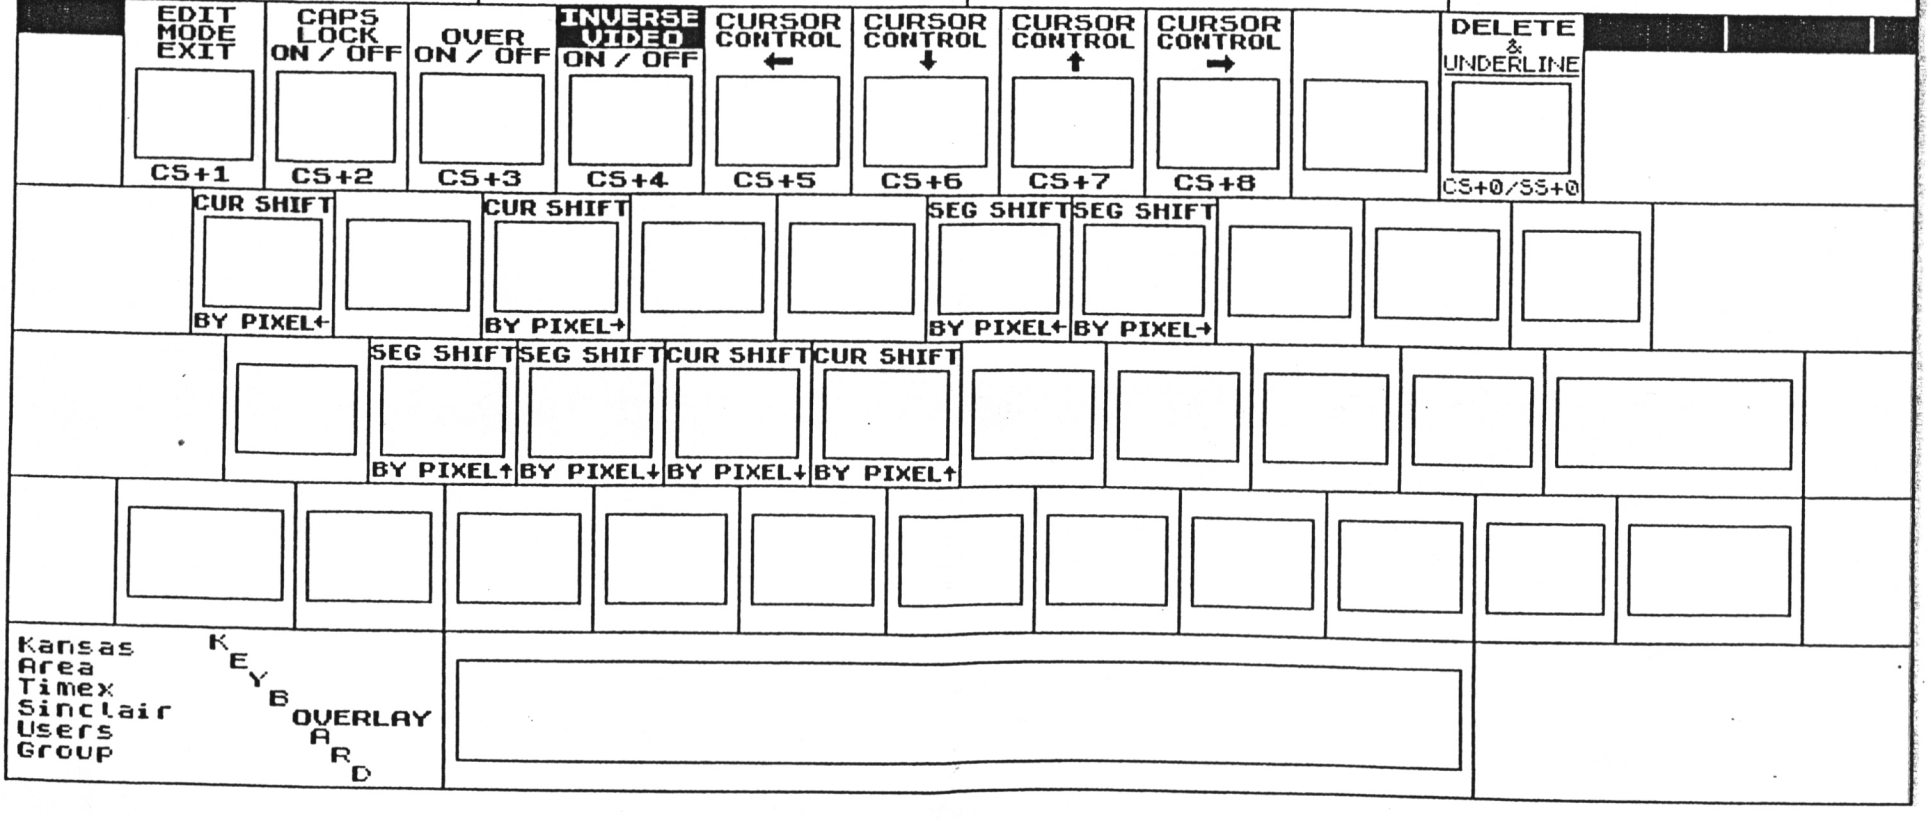
(OVER) "CAPS SHIFT"+3 toggles the OVER type function ON/OFF.
(SEGMENT SHIFT) "SYMBOL SHIFT"+Y(**AND**), D(**STEP**), S(**NOT**), or U(**OR**) shifts sections of the doodle pad (screen) LEFT, DOWN, UP, or RIGHT respectively.
(CAPS ON/OFF) "CAPS SHIFT"+2 toggles upper & lower case characters.
(EDIT EXIT) "CAPS SHIFT"+1 exits the EDIT mode & returns to the MAIN MENU.